



## RS6 OE+ CARBON HATCH SPOILER / CFP-005




## INSTALLATION INSTRUCTIONS:

**ATTENTION:** *Installation should be carried out by a professional technician who is familiar with bodywork removal and fitting. We suggest installation to be done by one of our certified installation partners.*

- For ease of installation we recommend working on a suitable car lift.
- Required time to complete the installation: 1h
- Required tools: 10mm socket, Torx T20 and some basic tools for releasing clips retainers, Heat gun.

## INSTALLATION PROCEDURE:

- Step 1: Remove the rear hatch interior covers.
- Step 2: Unplug the brake light connector (1) and antenna connectors (2)
- Step 3: Remove 4 10mm nuts (3)

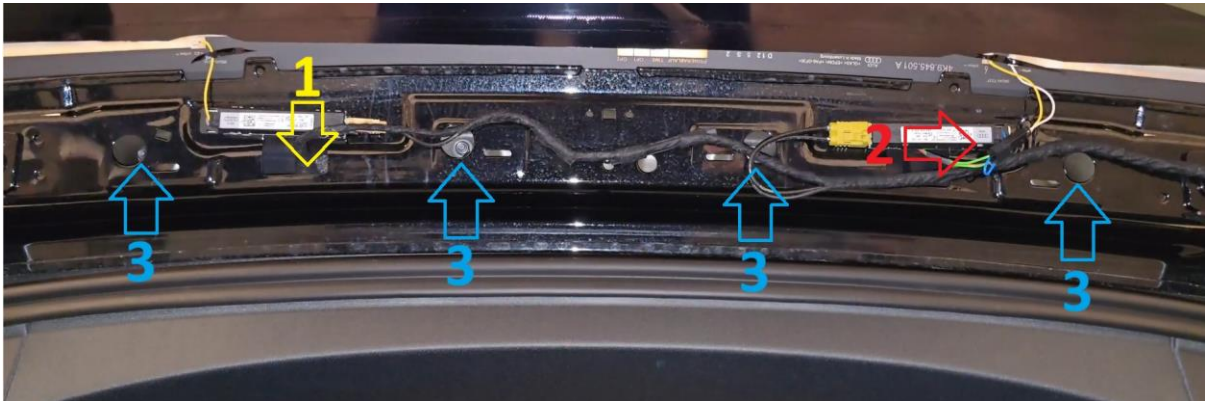

- Step 4: Remove the original spoiler by pulling it up and releasing the plastic retainers.
- Step 5: Remove the brake light along with the brake light harness from the original spoiler and reinstall in to the new carbon spoiler using T20 bolts tightened to 5 Nm.

-Step 6: Position the spoiler and adjust the height and gaps.

-Step 7: Secure the spoiler by tightening 4 M6 nuts to 20Nm

-Step 8: Pull out the VHB tape liner and press the sides of the spoiler while controlling the gaps.

